



































Original	Replacement	Original	Replacement
On/Off	 Power	Off/Tim	 Setup / OPT /
Mute	 Mute / Dimmer	Text	 Text / Goto
Reveal	 Play / Slow	TV/AV	 AV / Input / RDS
Update	 Pause / Step / Freeze	Menu	 Menu / Home
Txt Stop	 Stop / Hold	Menu Up	 Up
Tune-	 << / Tune-	Info	 Info / Angle
Tone+	 >> / Tune+	Menu Left	 Left
Game Coo	 I<< / Preset-	OK Enter	 OK
Aft/Caf	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Store	 Eject / Surround	Back	 Back / Return
Browse	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Display	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Menu video	 D.Menu / Top	Disp	 Display / Media



Original	Replacement	Original	Replacement
Chan.Down	 CH- / Page-	Tune+	 +  Shift + >> /
1	 1	Mix Scan	 +  Shift + Text /
2	 2	Search	 +  Shift + Red / Netflix /
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		

