 









 


 
 















| Original | Replacement | Original | Replacement |
|---|---|---|--|
|  Power |  Power |  Display/Tools |  Setup / OPT / |
|  Muting |  Mute / Dimmer |  One -Touch Play |  Text / Goto |
|  Play |  Play / Slow |  Menu/DVD |  Menu / Home |
|  Pause |  Pause / Step / Freeze |  Theatre |  TV/Radio / |
|  Stop |  Stop / Hold |  Up |  Up |
|  << |  << / Tune- |  Angle |  Info / Angle |
|  >> |  >> / Tune+ |  Left |  Left |
|  I<</Preset- |  I<< / Preset- |  OK |  OK |
|  >>I/Preset+ |  >>I / Preset+ |  Right |  Right |
|  Sound Mode |  Sound / Title |  Clear |  Exit / Cancel / Clear |
|  Audio |  Audio / Lang I/II |  Down |  Down |
|  Subtitle/D.Tuning |  Subtitle / EQ |  Return |  Back / Return |
|  Picture Navi |  Picture / Format |  Volume+ |  Vol+ |
|  S-Air Mode |  Zoom / Size |  Dynamic Bass |  Smart / List |
|  Sleep |  Sleep / Timer |  Function+ |  CH+ / Page+ |
|  Tv Input |  AV / Input / RDS |  Volume- |  Vol- |
|  System |  D.Menu / Top |  Display |  Display / Media |



Menu/Enter

 Menu





| Original | Replacement |
|--|--|
|  Power |  Power |
|  Tv Vol+ |  Vol+ |
|  Tv Input |  AV / Input / RDS |
|  Tv Vol- |  Vol- |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Guide / EPG / -/-- |
|  0 |  0 |
|  Enter |  Fav / Marker / PC |
|  Menu |  Menu / Home |

| Original | Replacement |
|--|---|
|  Muting |  Mute / Dimmer |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Return |  Back / Return |
|  Down |  Down |
|  Tools |  Setup / OPT / |
|  Prog- |  CH- / Page- |
|  Prog+ |  CH+ / Page+ |

