





















































































Original		Replacement		Original		Replacement	
	OSD		Smart / List		Angle		Info / Angle
	Search		Red / Netflix / Search		Audio		Audio / Lang I/II
	Mute		Mute / Dimmer		PBC		D.Menu / Top
	Source		AV / Input / RDS		Title		Sound / Title
	1		1		Up		Up
	2		2		Stop		Stop / Hold
	3		3		Play		Play / Slow
	4		4		Pause		Pause / Step / Freeze
	5		5		Left		Left
	6		6		Enter		OK
	7		7		Right		Right
	8		8		Slow		Shift + Play /
	9		9		Setup		Setup / OPT /
	0		0		Down		Down
	10+		Guide / EPG / -/-		Zoom		Zoom / Size
	Step		Shift + Pause / Step /		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Repeat		Green / APP / Repeat





	Original	Replacement	
	AB	 Yellow / YouTube / Repeat	
	I<<	 I<< / Preset-	
	>>I	 >>I / Preset+	
	Program	 TV/Radio /	
	Display	 Display / Media	
	<<	 << / Tune-	
	>>	 >> / Tune+	

	Original	Replacement

