














 



 


 













 































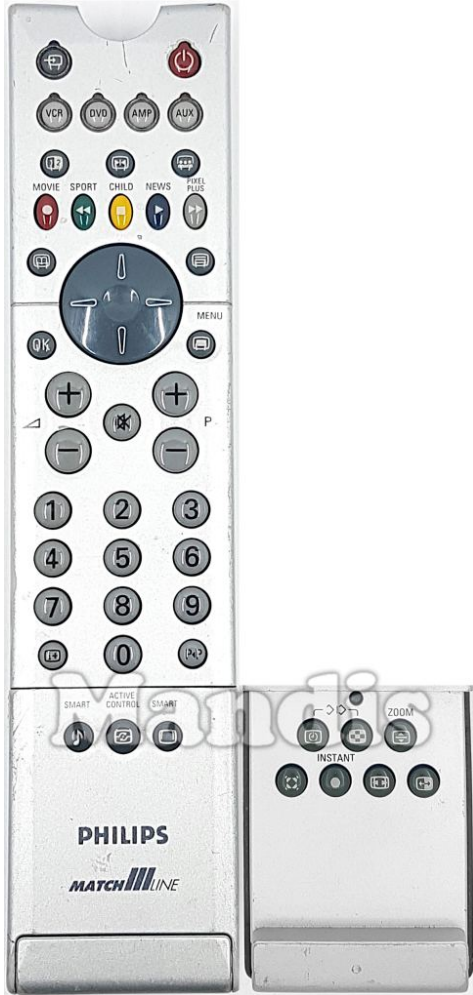

























Original	Replacement
 Input	 AV / Input / RDS
 Power	 Power
 VCR	 Shift + 4
 DVD	 Shift + 2
 AMP	 Shift + 5
 AUX	 Shift + 7
 [12]	 Picture / Format
 [> <]	 Shift + Zoom /
 [...]	 Subtitle / EQ
 Red/Rec/Movie	 Red / Netflix / Search
 Green/<</Sport	 Green / APP / Repeat
 Yellow/Stop/Child	 Yellow / YouTube / Repeat
 Blue/Play/News	 Blue / Prime Video / Random
 >>/Pixel Plus	 >> / Tune+
 Guide	 Guide / EPG / -/--
 Up	 Up
 [=]	 Text / Goto

 
Original	Replacement
 Left	 Left
 Right	 Right
 OK	 OK
 Down	 Down
 Menu	 Menu / Home
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7









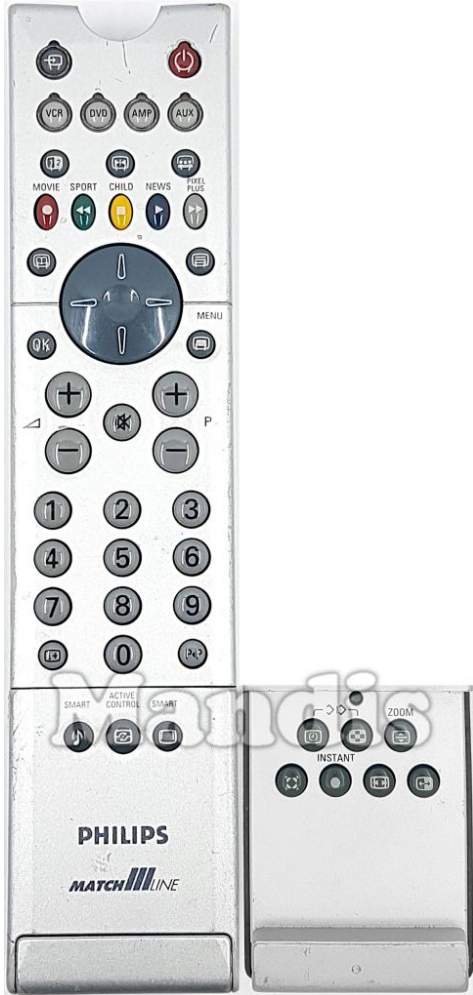

 






















 






 







 























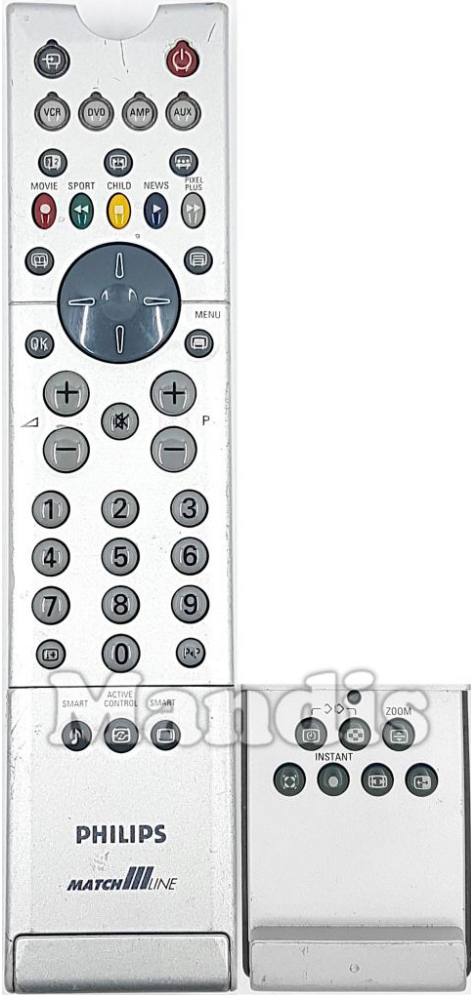 
	Original	Replacement	Original	Replacement
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P	 Fav / Marker / PC		
	♪ Smart	 Sound / Title		
	[-o-]/Active Control	 D.Menu / Top		
	[] Smart	 Smart / List		
	[o]	 TV/Radio /		
	Setup	 Setup / OPT /		
	[+]	 Display / Media		
	[♦]/Zoom	 Zoom / Size		
	[]	 Audio / Lang I/II		
	Instant	 Back / Return		
	[<>]	 Sleep / Timer		
	[↔]	 Eject / Surround		





Original	Replacement	Original	Replacement
	 AV / Input / RDS		 Right
	 Power		 OK
	 Shift + 4		 Down
	 Shift + 2		 Menu / Home
	 Shift + 5		 Vol+
	 Shift + 7		 CH+ / Page+
	 Zoom / Size		 Vol-
	 Subtitle / EQ		 Mute / Dimmer
	 Red / Netflix / Search		 CH- / Page-
	 Green / APP / Repeat		 1
	 Yellow / YouTube / Repeat		 2
	 Blue / Prime Video / Random		 3
	 >> / Tune+		 4
	 Guide / EPG / -/--		 5
	 Up		 6
	 Text / Goto		 7
	 Left		 8

 




 



 




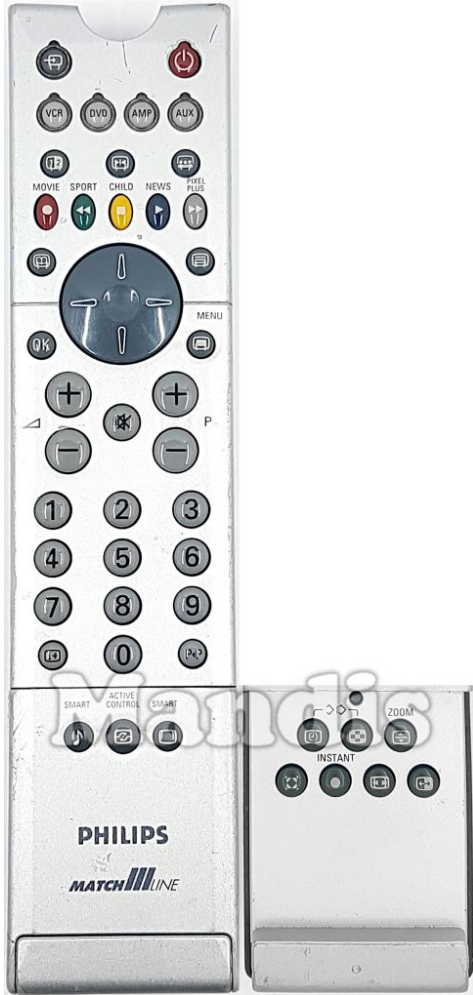




























Original	Replacement
	9
	Info / Angle
	0
	Fav / Marker / PC
	Smart / List

Original	Replacement

 




Original	Replacement
	 AV / Input / RDS
	 Power
	 Shift + 4
	 Shift + 2
	 Shift + 5
	 Shift + 7
	 Zoom / Size
	 Subtitle / EQ
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 >> / Tune+
	 Guide / EPG / -/-
	 Up
	 Text / Goto
	 Left

 
Original	Replacement
	 Right
	 OK
	 Down
	 Menu / Home
	 Vol+
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8



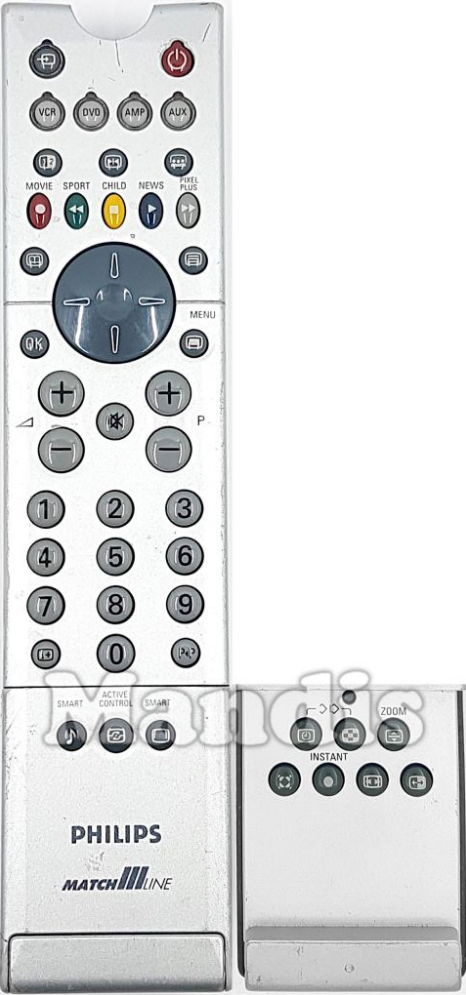





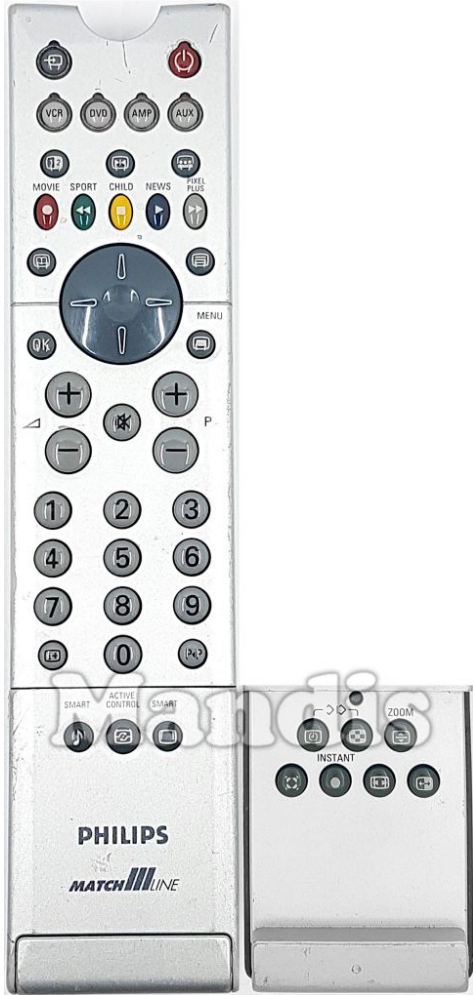
















 










 




















 



 
 
 






Original	Replacement	Original	Replacement
9	9		
[i+]	Info / Angle		
0	0		
P<P	Fav / Marker / PC		





Original		Replacement		Original		Replacement	
	Input		AV / Input / RDS		Vol+		Vol+
	Power		Power		P+		CH+ / Page+
	VCR		Shift + 4		Vol-		Vol-
	DVD		Shift + 2		Mute		Mute / Dimmer
	AMP		Shift + 5		P-		CH- / Page-
	AUX		Shift + 7		1		1
	[...]		Subtitle / EQ		2		2
	Green/<</Sport		Green / APP / Repeat		3		3
	>>/Pixel Plus		>> / Tune+		4		4
	Guide		Guide / EPG / -/--		5		5
	Up		Up		6		6
	[=]		Text / Goto		7		7
	Left		Left		8		8
	Right		Right		9		9
	OK		OK		0		0
	Down		Down		P<P		Fav / Marker / PC
	Menu		Menu / Home				

