


 



Original		Replacement		Original		Replacement	
	Power		Power		Nicam		Audio / Lang I/II
	Mute		Mute / Dimmer		Menu		Menu / Home
	1		1		Up		Up
	2		2		Source		AV / Input / RDS
	3		3		Left		Left
	4		4		OK		OK
	5		5		Right		Right
	6		6		Down		Down
	7		7		Exit		Exit / Cancel / Clear
	8		8		Display		Display / Media
	9		9		Vol+		Vol+
	0		0		CH+		CH+ / Page+
	-/--	+	Shift + Guide / EPG / -/--		Vol-		Vol-
	Recall		Back / Return		List		Smart / List
	P.Mode		Picture / Format		FAV/List		Fav / Marker / PC
	S.Mode		Sound / Title		CH-		CH- / Page-
	Sleep		Sleep / Timer		Tv/Radio		TV/Radio /



Program



Original	Replacement
 EPG	 Guide / EPG / -/--
 Aspect	 Shift + Picture / Format
 Freeze	 Pause / Step / Freeze
 Index	 Info / Angle
 Cancel	 Shift + Exit / Cancel / Clear
 Subpage	 Subtitle / EQ
 Text	 Text / Goto
 Reveal	 D.Menu / Top
 Size	 Zoom / Size
 Hold	 Stop / Hold
 Mix	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Cyan	 Blue / Prime Video / Random

Original	Replacement

