






































 
















 









 





 














 




 
 




Original		Replacement		Original		Replacement	
	Aper / Chiuso		Eject / Surround		8		8
	Video / Y		AV / Input / RDS		9		9
	Power		Power		Prog		TV/Radio /
	OSD		Display / Media		Intro		Smart / List
	PBC		D.Menu / Top		0		0
	Titolo		Sound / Title		10+		Guide / EPG / -/-
	Menu		Menu / Home		Pausa		Pause / Step / Freeze
	Ricerca		Red / Netflix / Search		Info / Play		Play / Slow
	1		1		Info / Play		Info / Angle
	2		2		Up		Up
	3		3		Left		Left
	Repeticione		Green / APP / Repeat		Setup		Setup / OPT /
	4		4		Right		Right
	5		5		Ritorno		Back / Return
	6		6		Down		Down
	A-B RPT		Yellow / YouTube / Repeat		Stop		Stop / Hold
	7		7		<I Ralent		CH- / Page-





	Original	Replacement	
	Ralent I>	 CH+ / Page+	
	<< F.REV	 << / Tune-	
	>> F.FWD	 >> / Tune+	
	Step	 +  Shift + Pause / Step /	
	Zoom	 Zoom / Size	
	I<< Prec	 I<< / Preset-	
	>>I Succ	 >>I / Preset+	
	Sottotitoli	 Subtitle / EQ	
	NTSC/PAL	 Picture / Format	
	Volume-	 Vol-	
	Volume+	 Vol+	
	Annoiladone	 Sleep / Timer	
	Track	 Text / Goto	
	Audio	 Audio / Lang I/II	
	Muto	 Mute / Dimmer	

Original	Replacement

