
 



 



 








 



 





 



 



 







 
 
 

 

 



 






 
 








 
 
 




 












 








| Original | Replacement | Original | Replacement |
|--|--|--|---|
|  Power |  Power |  0 |  0 |
|  Setup |  Setup / OPT / |  +10 |  Guide / EPG / -/- |
|  Digest |  Smart / List |  Clear |  Exit / Cancel / Clear |
|  Lang |  Shift + Audio / Lang I/II |  Play |  Play / Slow |
|  Display |  Display / Media |  Up |  Up |
|  1 |  1 |  Stop |  Stop / Hold |
|  2 |  2 |  Left |  Left |
|  3 |  3 |  Select |  OK |
|  Zoom |  Zoom / Size |  Right |  Right |
|  4 |  4 |  Pause/Step |  Pause / Step / Freeze |
|  5 |  5 |  Down |  Down |
|  6 |  6 |  Slow |  Shift + Play / |
|  A-B Repeat |  Yellow / YouTube / Repeat |  F.BWD |  << / Tune- |
|  7 |  7 |  F.FWD |  >> / Tune+ |
|  8 |  8 |  Prev. |  I<< / Preset- |
|  9 |  9 |  Next |  >>I / Preset+ |
|  1/All Repeat |  Green / APP / Repeat |  Subtitle |  Subtitle / EQ |

| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  0 |  0 |  0 |  0 |
|  +10 |  Guide / EPG / -/- |  Clear |  Exit / Cancel / Clear |
|  Play |  Play / Slow |  Up |  Up |
|  Stop |  Stop / Hold |  Left |  Left |
|  Select |  OK |  Right |  Right |
|  Pause/Step |  Pause / Step / Freeze |  Down |  Down |
|  Slow |  Shift + Play / |  F.BWD |  << / Tune- |
|  F.FWD |  >> / Tune+ |  Prev. |  I<< / Preset- |
|  Next |  >>I / Preset+ |  Subtitle |  Subtitle / EQ |





| Original | Replacement | Original | Replacement |
|--|--|----------|-------------|
|  Angle |  Info / Angle | | |
|  Audio |  Audio / Lang I/II | | |
|  Volume+ |  Vol+ | | |
|  Program |  Shift + TV/Radio / Program | | |
|  Menu/PBC |  Menu / Home | | |
|  Title/Ret. |  Sound / Title | | |
|  Volume- |  Vol- | | |
|  Search |  Red / Netflix / Search | | |
|  Tv Sys |  TV/Radio / | | |
|  Tv Mode |  Fav / Marker / PC | | |
|  Mute |  Mute / Dimmer | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

