










 
 

 






 



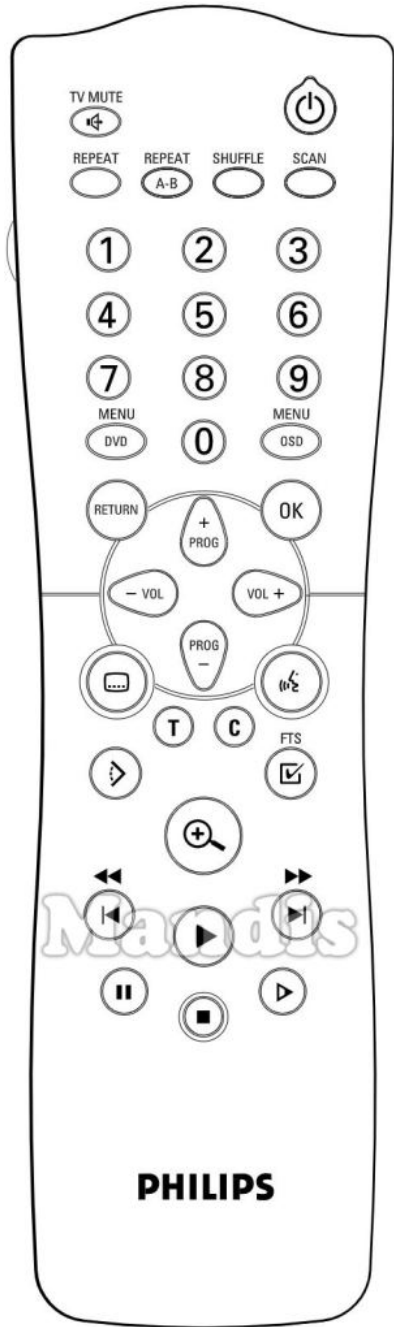














Original	Replacement	Original	Replacement
	Power		Power
	Repeat		Text
	A-B Repeat		Options
	Shuffle		AV
	Scan		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DVD Menu		D. Menu
	0		0
	OSD Menu		Menu
	Return		Back
	Up		Up
	P+		Ch +
	OK		Ok
	Left		Left
	Vol-		Vol -
	Right		Right
	Vol+		Vol +
	[...]		Subt
	Down		Down
	P-		Ch -
	Audio		Dual
	T-C		TV/R
	Angle		Format
	Zoom		Eject
	<<		<<
	I<		I<<





Original	Replacement
	
Power	Power
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
Up	Up
	
OK	Ok
	
Vol -	Vol -
	
Left	Left
	
Vol +	Vol +
	
Right	Right

Original	Replacement
	
Down	Down
	
I<<	I<<
	
I<<	<<
	
>>I	>>I
	
>>I	>>
	
Stop	Stop

