



Original	Replacement	Original	Replacement
Power	Power	8	8
Power Tv	Shift + Power	9	9
Vol+ Tv	Vol+	FPlay	Shift + Green / APP /
CH+ Tv	Shift + CH+ /	Last View	Fav / Marker / PC
Drive Select	Smart / List	0	0
Input AV Tv	Shift + AV / Input / RDS	NET	Display / Media
Vol- Tv	Vol-	Netflix	Shift + Red / Netflix /
CH- Tv	Shift + CH- /	I<< Skip	I<< / Preset-
1	1	Skip >>I	>>I / Preset+
2	2	<< Slow/Search	<< / Tune-
3	3	Slow/Search >>	>> / Tune+
Page/CH+	CH+ / Page+	Stop	Stop / Hold
4	4	Pause	Pause / Step / Freeze
5	5	Play	Play / Slow
6	6	i/Status	Info / Angle
Page/CH-	CH- / Page-	Exit	Exit / Cancel / Clear
7	7	Guide	Guide / EPG / -/-





Original	Replacement
Video Menu	D.Menu / Top
Left	Left
OK	OK
Up	Up
Right	Right
Function Menu	Menu / Home
Down	Down
Back/Return	Back / Return
Option	Setup / OPT /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Text	Text / Goto
STTL	Subtitle / EQ

Original	Replacement
Prog/Check	Shift + TV/Radio / Program
Chapter	Picture / Format
Delete	AV / Input / RDS
Radio/TV	TV/Radio /
AD	Audio / Lang I/II
Time Slip	Sleep / Timer
-10s Manual Skip	Shift + Left
+60s Manual Skip	Shift + Right

