 

 









 



 



 

 

 

 

 

 

 

 



 







 









 

 

 





 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Info	 Info / Angle
 Mute	 Mute / Dimmer	 Menu	 Menu / Home
 1	 1	 Up	 Up
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Left	 Left
 Mark	 Fav / Marker / PC	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Text	 Text / Goto
 6	 6	 Down	 Down
 Tv/Radio	 TV/Radio /	 EPG	 Guide / EPG / -/-
 7	 7	 <<	 << / Tune-
 8	 8	 Stop	 Stop / Hold
 9	 9	 Play	 Play / Slow
 Source	 AV / Input / RDS	 Pause	 Pause / Step / Freeze
 Timeshift	 Smart / List	 I<<	 I<< / Preset-
 0	 0	 Rec	 Rec / Rec Mode
 Recall	 Back / Return	 Audio/Lang	 Audio / Lang I/II



