



Original	Replacement	Original	Replacement
	1		1
	3		3
	Power		Power
	2		2
	4		4
	5		5
	6		6
	Power Tv	+	Shift + Power
	7		7
	8		8
	9		9
	Sleep		Sleep / Timer
	10		Guide / EPG / -/--
	Return	+	Shift + Back / Return
	0		0
	Cancel	+	Shift + Exit / Cancel / Clear
	+10		Fav / Marker / PC

Original	Replacement	Original	Replacement
	Page	+	Shift + Fav / Marker / PC
	Dimmer	+	Shift + Mute / Dimmer
	Progressive		Exit / Cancel / Clear
	Mic Mix	+	Shift + Smart / List
	Zoom		Zoom / Size
	Echo	+	Shift + Zoom / Zoom /
	Angle		Info / Angle
	Reserve		AV / Input / RDS
	Play Mode		Back / Return
	Audio		Audio / Lang I/II
	Karaoke		Eject / Surround
	Subtitle		Subtitle / EQ
	VFP		TV/Radio /
	Key b	+	Shift + Subtitle / EQ
	Key #	+	Shift + Setup / OPT / Tools
	Repeat		Green / APP / Repeat
	Top Menu		D.Menu / Top





Original	Replacement
Up	Up
Tv/Video	Shift + TV/Video / Program
Menu	Menu / Home
Left	Left
Tv Channel-	Shift + CH- /
Enter	OK
Tv Channel+	Shift + CH+ /
Right	Right
Set Up	Setup / OPT /
Down	Down
On Screen	Display / Media
FM/AM	Red / Netflix / Search
FM Mode	Smart / List
Play/Tape A	Shift + Play /
<> Tape B	Yellow / YouTube / Repeat
Play DVD/CD	Play / Slow
AUX	Shift + 7

Original	Replacement
Stop	Stop / Hold
Pause	Pause / Step / Freeze
I<</Prev	I<< / Preset-
I<< Group Skip	Shift + Left
>>I/Next	>>I / Preset+
>>I Group Skip	Shift + Right
<</Slow-	<< / Tune-
>>/Slow+	>> / Tune+
Active Bass Extension +	CH+ / Page+
3D Phonic	Picture / Format
Sound Mode	Sound / Title
Active Bass Extension -	CH- / Page-
DVD Level	Shift + Display / Media
Rhythm AX	Text / Goto
Fade Muting	Mute / Dimmer
Vol-	Vol-
Tv Vol-	Shift + Down





Original	Replacement
Vol+	Vol+
Tv Vol+	+ Shift + Up

Original	Replacement

