




 







 
 












 




 
 

 





Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	Function		D.Menu / Top
	TFT Mode		Display / Media
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	--/10+		Guide / EPG / -/-
	Mute		Mute / Dimmer

Original	Replacement	Original	Replacement
	PBC/Menu		Menu / Home
	Clear		Exit / Cancel / Clear
	0		0
	Setup		Setup / OPT /
	Up		Up
	Search		Red / Netflix / Search
	Vol+		Vol+
	Left		Left
	OK		OK
	Right		Right
	Vol-		Vol-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Down		Down
	Stop		Stop / Hold
	Audio		Audio / Lang I/II
	I<<		I<< / Preset-





Original	Replacement	Original	Replacement
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Info/Zoom		Info / Angle
	List/Slow		Zoom / Size
	Tv/Radio/Tilte		TV/Radio /
	Subtitle		Subtitle / EQ
	Text/Repeat		Text / Goto
	EPG/Program		Shift + Guide / EPG / --
	Return		Back / Return
	FAV/Display		Picture / Format
	Red/A-B		Shift + Red / Netflix /
	Green/N/P		Green / APP / Repeat
	Blue/Language		Blue / Prime Video / Random
	Yellow/Angle		Yellow / YouTube / Repeat

Original	Replacement

