




 
 



Original	Replacement
 Eject/Thrater	 Fav / Marker / PC
 Input Tv	 AV / Input / RDS
 Power Tv	 +  Shift + Power
 Power	 Power
 1	 1
 2	 2
 3	 3
 Vol+	 Vol+
 4	 4
 5	 5
 6	 6
 Vol-	 Vol-
 7	 7
 8	 8
 9	 9
 Timer	 Sleep / Timer
 Audio	 Audio / Lang I/II

Original	Replacement
 0	 0
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 Pop Up Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Option	 Setup / OPT /
 Home/Player	 +  Shift + Display / Media





Original	Replacement	Original	Replacement
	I<< / Preset-		
	CH- / Page-		
	CH+ / Page+		
	>>I / Preset+		
	<< / Tune-		
	Play / Slow		
	>> / Tune+		
	Display / Media		
	Pause / Step / Freeze		
	Stop / Hold		

