






























 














| Original  | Replacement  |
|---|--|
|  Input       |  AV / Input / RDS         |
|  Power       |  Power                    |
|  Auto Sound  |  Sound / Title            |
|  Standard    |  Zoom / Size              |
|  Cinema      |  Picture / Format         |
|  Music       |  TV/Radio /               |
|  Voice       |  Display / Media          |
|  Night       |  Exit / Cancel / Clear    |
|  Vol+        |  Vol+                     |
|  Vol-        |  Vol-                     |
|  Indicator  |  Info / Angle            |
|  Mute      |  Mute / Dimmer          |
|  Play Mode |  Red / Netflix / Search |
|  Audio     |  Audio / Lang I/II      |
|  Up        |  Up                     |
|  Enter     |  OK                     |
|  Down      |  Down                   |

| Original  | Replacement   |
|---|---|
|  Play  |  Play / Slow           |
|  Pause |  Pause / Step / Freeze |
|  I<<   |  I<< / Preset-         |
|  >>I   |  >>I / Preset+         |

