







 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Media		Shift + Display / Media
	Aspect		Zoom / Size
	PMode		Picture / Format
	SMode		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	List		Smart / List
	0		0
	Recall		Back / Return
	Display		Display / Media
	Eject		Eject / Surround
	Rec		Rec / Rec Mode
	Red/Program		Red / Netflix / Search
	Green/Info		Green / APP / Repeat
	Yellow/Goto		Yellow / YouTube / Repeat
	Blue/AB		Blue / Prime Video / Random
	Sleep		Sleep / Timer
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit/DVD Setup		Exit / Cancel / Clear





Original	Replacement
 CH+ / Page+	 CH+ / Page+
 Subtitle	 Subtitle / EQ
 Vol+	 Vol+
 CH-	 CH- / Page-
 T.Shift/Angle	 Info / Angle
 Vol-	 Vol-
 Play/Hold	 Play / Slow
 Pause	 Pause / Step / Freeze
 <</Reveal	 << / Tune-
 >>/Size	 >> / Tune+
 Stop/Index	 Stop / Hold
 I<<	 I<< / Preset-
 >>/S.Page	 >>I / Preset+
 Text/Zoom	 Text / Goto
 FAV/DVD Menu	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 DTV	 D.Menu / Top

Original	Replacement
 EPG/Title	 Guide / EPG / -/--
 Tv/Radio	 TV/Radio /

