




Original		Replacement		Original		Replacement	
	Enreg.		Rec / Rec Mode		7		7
	Veille		Power		8		8
	Up		Up		9		9
	Right		Right		Vol+		Vol+
	Left		Left		0		0
	Down		Down		P+		CH+ / Page+
	Menu		Menu / Home		Mute Tv		Mute / Dimmer
	OK		OK		Power Tv		Shift + Power
	Annul		Exit / Cancel / Clear		P-		CH- / Page-
	Timer		Sleep / Timer		Vol-		Vol-
	Select		Fav / Marker / PC	<< button"/>	<<		<< / Tune-
	1		1		Lecture		Play / Slow
	2		2	>> button"/>	>>		>> / Tune+
	3		3		>I / Index		>>I / Preset+
	4		4		>I< / Arret Image		I<< / Preset-
	5		5		Stop		Stop / Hold
	6		6		Instant View		Picture / Format





Original	Replacement	Original	Replacement
 Compteur	 Back / Return		
 Moniteur	 AV / Input / RDS		

