



	Original	Replacement		Original	Replacement
	Tuner	Shift + 6		9	9
	Tape	Shift + 5		Mono/ST	Menu / Home
	TV	Shift + 1		0	0
	V-CD	Shift + 2		Volume-	Vol-
	CD	Shift + 3		Volume+	Vol+
	DCC	Shift + 8		Mute	Mute / Dimmer
	VCR1	Shift + 4		FR.Direct	D.Menu / Top
	VCR 2	Shift + 7		Preset-	I<< / Preset-
	1	1		Preset+	>>I / Preset+
	2	2		Sleep	Sleep / Timer
	3	3		Display	Display / Media
	Standby	Power		Tuning-	<< / Tune-
	4	4		Tuning+	>> / Tune+
	5	5		Vol TV-	Shift + Vol-
	6	6		Vol TV+	Shift + Vol+
	7	7		Center Mode	OK
	8	8		Center Up	Up











 























 



 


 








 









 

 









Original		Replacement		Original		Replacement	
	Rear Up		Right				
	Test Tone		Text / Goto				
	Center Down		Down				
	Rear Down		Left				
	Delay		Setup / OPT /				
	Dolby Pro Logic		Sound / Title				
	3 Stereo		Audio / Lang I/II				
	Hall		Subtitle / EQ				
	Surr.Off		Eject / Surround				













 











	Original	Replacement		Original	Replacement
	Tuner	 Shift + 6		8	 8
	Tape	 Shift + 5		9	 9
	TV	 Shift + 1		Disc Down	 CH- / Page-
	V-CD	 Shift + 2		0	 0
	CD	 Shift + 3		Volume-	 Vol-
	DCC	 Shift + 8		Volume+	 Vol+
	VCR 1	 Shift + 4		Mute	 Mute / Dimmer
	VCR 2	 Shift + 7		Play	 Play / Slow
	1	 1		I<	 I<< / Preset-
	2	 2		>I	 >>I / Preset+
	3	 3		Sleep	 Sleep / Timer
	Standby	 Power		Stop	 Stop / Hold
	4	 4		Display	 Display / Media
	5	 5		<<	 << / Tune-
	6	 6		Pause	 Pause / Step / Freeze
	Disc Up	 CH+ / Page+		>>	 >> / Tune+
	7	 7		Center Mode	 OK













 



























 


 








 









 

 







Original	Replacement	Original	Replacement
	Center Up		Up
	Rear Up		Right
	Test Tone		Text / Goto
	Center Down		Down
	Rear Down		Left
	Delay		Setup / OPT /
	Dolby Pro Logic		Sound / Title
	3 Stereo		Audio / Lang I/II
	Hall		Subtitle / EQ
	Surr. Off		Eject / Surround

Original	Replacement	Original	Replacement





	Original	Replacement		Original	Replacement
	Tuner	 Shift + 6		8	 8
	Tape	 Shift + 5		9	 9
	TV	 Shift + 1		Disc Down	 CH- / Page-
	V-CD	 Shift + 2		0	 0
	CD	 Shift + 3		Volume-	 Vol-
	DCC	 Shift + 8		Volume+	 Vol+
	VCR 1	 Shift + 4		Mute	 Mute / Dimmer
	VCR 2	 Shift + 7		Play	 Play / Slow
	1	 1		I<	 I<< / Preset-
	2	 2		>I	 >>I / Preset+
	3	 3		Sleep	 Sleep / Timer
	Standby	 Power		Stop	 Stop / Hold
	4	 4		Display	 Display / Media
	5	 5		<<	 << / Tune-
	6	 6		Pause	 Pause / Step / Freeze
	Disc Up	 CH+ / Page+		>>	 >> / Tune+
	7	 7		Center Mode	 OK





Original	Replacement	Original	Replacement
	Center Up		Up
	Rear Up		Right
	Test Tone		Text / Goto
	Center Down		Down
	Rear Down		Left
	Delay		Setup / OPT /
	Dolby Pro Logic		Sound / Title
	3 Stereo		Audio / Lang I/II
	Hall		Subtitle / EQ
	Surr. Off		Eject / Surround



 







 



 













Original	Replacement	Original	Replacement
	Tuner		Shift + 6
	Tape		Shift + 5
	TV		Shift + 1
	V-CD		Shift + 2
	CD		Shift + 3
	DCC		Shift + 8
	VCR1		Shift + 4
	VCR 2		Shift + 7
	1		1
	2		2
	3		3
	Standby		Power
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	TXT		Text / Goto
	Rcvr Volume-		Shift + Vol-
	Rcvr Volume+		Shift + Vol+
	Rcvr Mute		Shift + Mute / Dimmer
	TV Mute		Mute / Dimmer
	Enlarge		Zoom / Size
	CH Down		CH- / Page-
	CH Up		CH+ / Page+
	Sleep		Sleep / Timer
	Hold		Stop / Hold
	Display		Display / Media
	Page-		Shift + CH- /
	Cancel		Exit / Cancel / Clear
	Page+		Shift + CH+ / Page+





Original		Replacement		Original	Replacement
	Vol TV -		Vol+		
	Vol TV +		Vol-		
	Center Mode		OK		
	Center Up		Up		
	Rear Up		Right		
	Test Tone		Shift + Text /		
	Center Down		Down		
	Rear Down		Left		
	Delay		Setup / OPT /		
	Dolby Pro Logic		Sound / Title		
	3 Stereo		Audio / Lang I/II		
	Hall		Subtitle / EQ		
	Surr.Off		Eject / Surround		

