




 

 
 
 
 
 

 

 





 
 

 
















 


 











 


 

 
 




 




Original	Replacement	Original	Replacement
	Source		AV
	Power		Power
	TV		TV/R
	-[/+]		Sleep
	[<>]		Format
	O)/I/II		Dual
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AD		Shift + Subt
	0		0
	Recall		Pre Ch
	Vol+		Vol +
	[i+]		Info
	P+		Ch +
	Vol-		Vol -
	Mute		Mute
	P-		Ch -
	Quick		Smart
	[.]		Shift + Options
	[>]		Options
	Text		Text
	List		List
	Menu		Menu
	↑↑		Shift + Up
	Guide		Guide
	Up		Up





Original	Replacement	Original	Replacement
			
Left	Left	Yellow	Yellow
		Blue	Blue
Right	Right		
			
Back	Back		
Down	Down		
Exit	Exit		
↓↓	SHIFT + Down		
<</[≡+]	<<		
Play	Play		
>>/[≡◇]	>>		
I<</[≡?]	I<<		
Stop	Stop		
Pause/Step	Pause		
>>I/[O]/[≡x]	>>I		
Red	A		

