







| Original | Replacement |
|---|--|
|  Power AMP |  Power |
|  Power Audio |  Shift + Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Disc |  Eject / Surround |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  ≥10 |  Guide / EPG / -/-- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Band |  Smart / List |
|  CH- |  CH- / Page- |
|  CH+ |  CH+ / Page+ |

| Original | Replacement |
|---|---|
|  Tape 1 |  Shift + 5 |
|  Tape 2 |  Shift + 4 |
|  CD |  Shift + 3 |
|  Tuner |  Shift + 6 |
|  Aux |  Shift + 7 |
|  Phono |  Shift + 1 |
|  Volume- |  Vol- |
|  Volume+ |  Vol+ |





| Original | Replacement |
|--|--|
|  Power CD |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Disc |  Eject / Surround |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  ≥10 |  Guide / EPG / -/-- |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  Tape 1 |  Shift + 5 |
|  Tape 2 |  Shift + 4 |
|  CD |  Shift + 3 |
|  TUNER |  Shift + 6 |

| Original | Replacement |
|--|---|
|  Aux |  Shift + 7 |
|  Phono |  Shift + 1 |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  Stop |  Stop / Hold |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Volume- |  Vol- |
|  Volume+ |  Vol+ |

