


















Original	Replacement
	 Power
	 D.Menu / Top
	 Mute / Dimmer
	 Shift + 0
	 Display / Media
	 AV / Input / RDS
	 Zoom / Size
	 Sleep / Timer
	 1
	 2
	 3
	 Fav / Marker / PC
	 4
	 5
	 6
	 Pause / Step / Freeze
	 7

Original	Replacement
	 8
	 9
	 Shift + CH+ /
	 TV/Radio /
	 0
	 Back / Return
	 Shift + CH- /
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 Smart / List
	 OK
	 Right
	 Vol+
	 CH- / Page-
	 Down





Original	Replacement
	Menu / Home
	Exit / Cancel / Clear
	Info / Angle
	Guide / EPG / -/--
	Red / Netflix / Search
	Picture / Format
	Green / APP / Repeat
	Text / Goto
	Yellow / YouTube / Repeat
	Audio / Lang I/II
	Blue / Prime Video / Random
	Rec / Rec Mode
	Play / Slow
	Stop / Hold
	Setup / OPT /
	<< / Tune-
	>> / Tune+

Original	Replacement
	I<< / Preset-
	>>I / Preset+

