



Original	Replacement
 POWER	 Power
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 RECALL	 Back / Return
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat

Original	Replacement
 BLUE	 Blue / Prime Video / Random
 MENU	 Menu / Home
 VOL+	 Vol+
 CH+	 CH+ / Page+
 INFO	 Info / Angle
 VOL-	 Vol-
 CH-	 CH- / Page-
 <<	 << / Tune-
 >>	 >> / Tune+
 PLAY/PAUSE	 Play / Slow
 PLAY/PAUSE	 Pause / Step / Freeze
 STOP	 Stop / Hold
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 EPG	 Guide / EPG / -/--





Original	Replacement	Original	Replacement
	DOWN		Down
	EXIT		Exit / Cancel / Clear
	FORMAT		Picture / Format
	AUDIO		Audio / Lang I/II
	TEXT		Text / Goto
	PIP		Display / Media
	Timer		Shift + Sleep / Timer
	zzZ		Sleep / Timer

Original	Replacement	Original	Replacement

