
 

 
 


 



 
 

 








 


 






 


 

 
 





 




Original		Replacement		Original		Replacement	
STEP	Step		Power	ANGLE	Angle		Red
SEARCH	Search		TV/R	AUDIO	Audio		Dual
MUTE	Mute		Mute	MENU /PBC	Menu PBC		Menu
SOURCE	Source		AV	TITLE	Title		3D
1	1		1	MODE	Mode		Exit
2	2		2	SETUP	Setup		Options
3	3		3	VOL+	Vol+		Vol +
4	4		4	VOL-	Vol-		Vol -
5	5		5	REPEAT	Repeat		Text
6	6		6	(SLOW	Slow		Format
7	7		7	PROGRAM	Program		Sleep
8	8		8	ZOOM	Zoom		Eject
9	9		9		Up		Up
0	0		0		Down		Down
10+	10+		Guide		Right		Right
DISPLAY	Display		Info		Left		Left
SUBTITLE	Subtitle		Subt	ENTER	Enter		Ok





	Original	Replacement	Original	Replacement
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	>>I	 >>I		
	I<<<	 I<<<		
	>>	 >>		
	<<<	 <<<		

