














Original	Replacement	Original	Replacement
 Power	 Power	 Top Menu	 Menu / Home
 Up /	 Up	 Rec	 Rec / Rec Mode
 TV / Video	 TV/Radio /	 << / I<<	 << / Tune-
 Down /	 CH- / Page-	 i / Setup	 Setup / OPT /
 Eject	 Eject / Surround	 Play	 Play / Slow
 DVD	 Shift + 2	 >> / >>I	 >> / Tune+
 Video	 Shift + 4	 Slow	 Shift + Play /
 Display / Clock/Counter	 Display / Media	 Pause / Frame	 Pause / Step / Freeze
 Input Select	 AV / Input / RDS	 Program	 Shift + TV/Radio / Program
 Right	 Right	 1	 1
 Disc Menu / Rec. End S	 D.Menu / Top	 2	 2
 Up /	 CH+ / Page+	 << / I<<	 I<< / Preset-
 Left	 Left	 3	 3
 Enter	 OK	 >> / >>I	 >>I / Preset+
 Return	 Back / Return	 4	 4
 Down /	 Down	 5	 5
 Stop	 Stop / Hold	 6	 6





	Original	Replacement		Original	Replacement
	 7	 7			
	 8	 8			
	 9	 9			
	 Audio	 AUDIO	Audio / Lang I/II		
	 Subtitle	 SUBTITLE	Subtitle / EQ		
	 Mark	 PC FAV MARKER	Fav / Marker / PC		
	 Search	 NETFLIX SEARCH	Red / Netflix / Search		
	 Angle	 ANGLE INFO	Info / Angle		
	 Zoom	 SIZE ZOOM	Zoom / Size		
	 C.Lock	 TIMER SLEEP	Sleep / Timer		
	 Repeat	 APP REPEAT	Green / APP / Repeat		
	 0 / Clear	 HDMI - BAT 0	0		
	 0 / Clear	 CLEAR EXIT CANCEL	Exit / Cancel / Clear		
	 Random / CM Skip	 Prime Video RANDOM	Blue / Prime Video / Random		
	 Showview	 LIST SMART	Smart / List		
	 A-B / SP/LP	 YouTube REPEAT A-B	Yellow / YouTube / Repeat		

