

 

 


 
 

 
 






Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Replacement
 Sleep	 Sleep / Timer
 Source	 AV / Input / RDS
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Display	 Display / Media
 CH-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu / Home
 OK	 OK





Original		Replacement	
	Exit		Exit / Cancel / Clear
	Subtitle		Subtitle / EQ
	Index		Info / Angle
	Size		Zoom / Size
	Reveal		D.Menu / Top
	Mix		Setup / OPT /
	Play		Play / Slow
	Pause/Hold		Pause / Step / Freeze
	I<</Cancel		I<< / Preset-
	>>I/Subpage		>>I / Preset+
	EPG		Guide / EPG / -/--
	FAV		Fav / Marker / PC
	Stop		Stop / Hold
	<</FAV-		<< / Tune-
	>>/FAV+		>> / Tune+
	Media	+	Shift + Display / Media
	Rec		Rec / Rec Mode

Original		Replacement	
	Timeshift		Smart / List
	Tv/Radio		TV/Radio /

