



































| Original         | Replacement  | Original    | Replacement   |
|------------------|--|-------------|---|
| Power            |  Power            | Hold / Auto |  Shift + Stop /              |
| Mute             |  Mute / Dimmer    | Hold / Auto |  D.Menu / Top                |
| 1                |  1                | Red         |  Red / Netflix / Search      |
| 2                |  2                | Green       |  Green / APP / Repeat        |
| 3                |  3                | Yellow      |  Yellow / YouTube / Repeat   |
| 4                |  4                | Blue        |  Blue / Prime Video / Random |
| 5                |  5                | Vol +       |  Vol+                        |
| 6                |  6                | Vol -       |  Vol-                        |
| 7                |  7                | I - II      |  Audio / Lang I/II           |
| 8                |  8                | Source      |  AV / Input / RDS            |
| 9                |  9                | CH +        |  CH+ / Page+                 |
| 0                |  0              | Freeze      |  Shift + Pause / Step /    |
| Text             |  Text / Goto    | CH -        |  CH- / Page-               |
| Recall / S.Page  |  Back / Return  | Sleep       |  Sleep / Timer             |
| Index / PVR List |  Smart / List   | Menu        |  Menu / Home               |
| Reveal / Rec     |  Rec / Rec Mode | Exit        |  Exit / Cancel / Clear     |
| Zoom / T.Shift   |  Zoom / Size    | DTV / Radio |  TV/Radio /                |






















 




Program







| Original | Replacement   | Original              | Replacement |
|----------|---|-----------------------|-------------|
| Power    |    | Power                 |             |
| Freeze   |    | Pause / Step / Freeze |             |
| Swap     |    | Back / Return         |             |
| PIP      |    | Eject / Surround      |             |
| I-II     |    | Audio / Lang I/II     |             |
| FAV.CH   |    | Fav / Marker / PC     |             |
| [≡]      |    | Text / Goto           |             |
| Mute     |    | Mute / Dimmer         |             |
| Sleep    |    | Sleep / Timer         |             |
| P.Size   |   | Zoom / Size           |             |
| 1        |  | 1                     |             |
| 2        |  | 2                     |             |
| 3        |  | 3                     |             |
| 4        |  | 4                     |             |
| 5        |  | 5                     |             |
| 6        |  | 6                     |             |
| 7        |  | 7                     |             |

| Original | Replacement   | Original              | Replacement |
|----------|---|-----------------------|-------------|
| 8        |    | 8                     |             |
| 9        |    | 9                     |             |
| 0        |    | 0                     |             |
| Vol+     |    | Vol+                  |             |
| Jump     |    | Setup / OPT /         |             |
| ENT      |    | Smart / List          |             |
| Vol-     |    | Vol-                  |             |
| Info     |    | Info / Angle          |             |
| Source   |    | AV / Input / RDS      |             |
| CH+      |   | CH+ / Page+           |             |
| Ch-      |  | CH- / Page-           |             |
| Exit     |  | Exit / Cancel / Clear |             |
| Menu     |  | Menu / Home           |             |
| Up       |  | Up                    |             |
| Left     |  | Left                  |             |
| OK       |  | OK                    |             |
| Right    |  | Right                 |             |





| Original | Replacement   | Original | Replacement |
|----------|---|----------|-------------|
| Down     |  Down                        |          |             |
| S.Mode   |  Sound / Title               |          |             |
| P.Mode   |  Picture / Format            |          |             |
| Red      |  Red / Netflix / Search      |          |             |
| Green    |  Green / APP / Repeat        |          |             |
| Yellow   |  Yellow / YouTube / Repeat   |          |             |
| Blue     |  Blue / Prime Video / Random |          |             |
| [≡i]     |  Display / Media             |          |             |
| [≡?]     |  Play / Slow                 |          |             |
| [≡↓]     |  D.Menu / Top               |          |             |
| [≡□]     |  Stop / Hold               |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |
|          |   |          |             |

