

 
 
 







 
 


 
 
 
 

 
 
 


 






 



 
 




 












 


 




 

 












 
 




 






Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute	Menu Off	 Exit
Update	 Play	Menu Down	 Down
Reveal	 Pause	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Info	 Rec	Volume-	 Vol -
Subt.List	 Subt	Menu audio	 Media
Sleep Timer	 Sleep	Chan.Down	 Ch -
Return TV	 TV/R	1	 1
Menu video	 D. Menu	2	 2
Text	 Text	3	 3
Txt Expand	 Eject	4	 4
TV/AV	 AV	5	 5
Menu	 Menu	6	 6
Menu Up	 Up	7	 7
Display	 Info	8	 8
Menu Left	 Left	9	 9



Original	Replacement	Original	Replacement
Guide -/-- 1.	 Guide		
0/10	 0		
2.Fav P/C 2.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Audio+	 +  Shift + Pause		
Tone-	 +  Shift + Stop		
Tone+	 +  Shift + Rec		
Surround	 +  Shift + Red		
Nicam/Mono	 +  Shift + Green		
Level L	 +  Shift + Yellow		
Level R/Woofer	 +  Shift + Blue		







 

 
 

 



 



 


 


 


 
 










Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Info	 +  Shift + Info	Back	 Back
Subt.List	 Subt	Volume+	 Vol +
Txt Stop	 Stop	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Media
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7

 






 
 


 
 

 


Original	Replacement	Original	Replacement
8	 8	Tune-	 +  Shift + Left
9	 9	Aft/Caf	 +  Shift + Ok
Guide -/-- 1.	 Guide	Tune+	 +  Shift + Right
0/10	 0	Bright- Sys	 +  Shift + Exit
2.Fav P/C 2.	 Pre Ch	Input	 +  Shift + Vol +
Red	 Red	Contrast+	 +  Shift + Ch +
Green	 Green	Output	 +  Shift + Vol -
Yellow	 Yellow	Contrast-	 +  Shift + Ch -
On/Tim	 I<<	4.# 16:9	 Format
Off/Tim	 <<	Surround	 +  Shift + Red
Blue	 Blue	Nicam/Mono	 +  Shift + Green
Audio-	 +  Shift + Down	Level L	 +  Shift + Yellow
AV 2	 +  Shift + AV	Level R/Woofer	 +  Shift + Blue
Audio+	 +  Shift + Up		
Bright+ Mode	 +  Shift + Menu		
Store	 Options		
Search	 +  Shift + TV/R		



Original	Replacement	Original	Replacement
Power ON/Off	 Power	Volume+	 Vol +
Mute	 Mute	Volume-	 Vol -
Every Pop	 Media	Pr 1	 1
Tape 1 Preset	 Menu	Pr 2	 2
Tape 1 Stop	 Down	Pr 3	 3
Vol Rs-/Effect	 Ch -	Pr 4	 4
Tape 2 Pre./eq	 +  Shift + Menu	Tape 2 REC./Jazz	 +  Shift + Up
Preset Pause	 +  Shift + Pause	Tape 1 Rec	 Up
Vol Rs+/S.Mode	 Ch +	Tape 1 F.FWD	 Right
Sleep	 Sleep	Tape 2 FF/AudioR	 +  Shift + Right
CD Random	 List	Tape 2	 +  Shift + Left
CD/Theater	 Dual	Tape 1 Play	 Ok
Repeat	 Text	Tape 2	 +  Shift + Ok
Input/Source	 AV	CD Play	 Play
Display	 Info	Pr 5	 5
Tape 1 Hall/Ats	 D. Menu	Tape 1 Rew	 Left
Funct./Direct	 Smart	CD Rewind	 <<



Original	Replacement	Original	Replacement
CD F.FWD	 >>		
Pr 6			
Prev./Prog-	 I<<		
Pr 7			
Pr 8			
Next/Prog+	 >>I		
Pr 9			
CD Pause	 Pause		
Mode	 Guide		
Pr 0/10			
Tape 2 Prev./T.Bassi+	 +  Shift + Back		
Tape 2	 +  Shift + Down		
Program	 Pre Ch		
C.Reset/T.Alti+	 Exit		

