 




Original	Replacement
 Standby	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 OSD	 Display / Media
 4	 4
 5	 5
 6	 6
 Audio	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Angle	 Info / Angle
 10/0	 0
 10+	 Guide / EPG / -/-
 Goto	 Text / Goto

Original	Replacement
 Subtitle	 Subtitle / EQ
 Setup	 Setup / OPT /
 Up	 Up
 Zoom	 Zoom / Size
 Left	 Left
 OK	 OK
 Right	 Right
 Title	 Sound / Title
 Down	 Down
 Menu	 Menu / Home
 L/R	 CH+ / Page+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Vol+	 Vol+
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 N/P	 CH- / Page-





Original		Replacement		Original	Replacement
	Step	+	Shift + Pause / Step /		
	Slow	+	Shift + Play /		
	Vol-		Vol-		
	Repeat	/	Green / APP / Repeat		
	A-B	/	Yellow / YouTube / Repeat		
	Prog		TV/Radio /		
	Return		Back / Return		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Clear		Exit / Cancel / Clear		
	DVD/USB		AV / Input / RDS		
	I<<		I<< / Preset-		
	>>I		>>I / Preset+		
	RAN		Blue / Prime Video / Random		
	PBC		Smart / List		

