








 

 

 



 



 

 















 

 

 

 
| Original | Replacement |
|--|---|
|  Power |  Power |
|  Eject |  Eject |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- / +10 |  Shift + Guide |
|  Recall |  Back |
|  Mute |  Mute |
|  P.Mode |  Format |
|  S.Mode |  Shift + Dual |

| Original | Replacement |
|---|---|
|  Sleep |  Sleep |
|  Vol + |  Vol + |
|  Vol - |  Vol - |
|  Audio DVD / |  Dual |
|  USB / Card |  Media |
|  Aspect |  3D |
|  Info |  Info |
|  Source |  AV |
|  Menu / Exit |  Menu |
|  Rec |  Rec |
|  Subtitle |  Subt |
|  DVD Setup |  Smart |
|  Up |  Up |
|  Down |  Down |
|  Right |  Right |
|  Left |  Left |
|  Enter |  Ok |





| Original | Replacement |
|--|---|
|  Red / Program |  Red |
|  Green / Goto |  Green |
|  Yellow / Angle |  Yellow |
|  Blue / Slow |  Blue |
|  Canales / Repeat |  List |
|  FAV / AB |  Pre Ch |
|  FAV + |  Ch + |
|  FAV - |  Ch - |
|  EPG / DVD |  Guide |
|  Play |  Play |
|  Pause / Mix |  Pause |
|  << / Index |  << |
|  >> / Size |  >> |
|  Stop / Clock |  Stop |
|  I<< / Hold |  I<< |
|  >>I / Subpage |  >>I |
|  Reveal |  D. Menu |

| Original | Replacement |
|--|---|
|  Teletext |  Text |
|  Tv/Radio |  TV/R |
|  Cancel |  Exit |
|  Still |  Options |

