







 



 


 







 








 

 

 

 
| Original   | Replacement   |
|--|---|
|  Power        |  Power           |
|  Eject        |  Eject           |
|  1            |  1               |
|  2            |  2               |
|  3            |  3               |
|  4            |  4               |
|  5            |  5               |
|  6            |  6               |
|  7            |  7               |
|  8           |  8              |
|  9          |  9             |
|  0          |  0             |
|  -/-- / +10 |  Shift + Guide |
|  Recall     |  Back          |
|  Mute       |  Mute          |
|  P.Mode     |  Format        |
|  S.Mode     |  Shift + Dual  |

| Original  | Replacement   |
|---|---|
|  Sleep       |  Sleep   |
|  Vol +       |  Vol +   |
|  Vol -       |  Vol -   |
|  Audio DVD / |  Dual    |
|  USB / Card  |  Media   |
|  Aspect      |  3D      |
|  Info        |  Info    |
|  Source      |  AV      |
|  Menu / Exit |  Menu    |
|  Rec        |  Rec    |
|  Subtitle  |  Subt  |
|  DVD Setup |  Smart |
|  Up        |  Up    |
|  Down      |  Down  |
|  Right     |  Right |
|  Left      |  Left  |
|  Enter     |  Ok    |





| Original   | Replacement   |
|--|---|
|  Red / Program    |  Red       |
|  Green / Goto     |  Green     |
|  Yellow / Angle   |  Yellow    |
|  Blue / Slow      |  Blue      |
|  Canales / Repeat |  List      |
|  FAV / AB         |  Pre Ch    |
|  FAV +            |  Ch +      |
|  FAV -            |  Ch -      |
|  EPG / DVD        |  Guide     |
|  Play             |  Play      |
|  Pause / Mix     |  Pause    |
|  << / Index     |  <<      |
|  >> / Size      |  >>      |
|  Stop / Clock   |  Stop    |
|  I<< / Hold     |  I<<     |
|  >>I / Subpage  |  >>I     |
|  Reveal         |  D. Menu |

| Original   | Replacement   |
|--|---|
|  Teletext |  Text    |
|  Tv/Radio |  TV/R    |
|  Cancel   |  Exit    |
|  Still    |  Options |

