




































 
 






Original	Replacement
 POWER	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 MUTE	 Mute / Dimmer
 0	 0
 TEXT	 Text / Goto
 GUIDE	 Guide / EPG / -/--
 INFO	 Info / Angle
 UP	 Up
 FAV	 Fav / Marker / PC

Original	Replacement
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 LAST	 Exit / Cancel / Clear
 DOWN	 Down
 Back	 Back / Return
 Menu	 Menu / Home
 RED / MOSAIC	 Red / Netflix / Search
 GREEN / SLEEP	 Shift + Sleep / Timer
 GREEN / SLEEP	 Green / APP / Repeat
 YELLOW /	 Yellow / YouTube / Repeat
 YELLOW /	 Audio / Lang I/II
 BLUE / LIST	 Smart / List
 BLUE / LIST	 Blue / Prime Video / Random
 VOL+	 Vol+
 PAGE UP	 Shift + CH+ /
 CH+	 CH+ / Page+





	Original	Replacement		Original	Replacement
	VOL-	 Vol-		ZOOM	 Zoom / Size
	PAGE DOWN	 Shift + CH- /		TV/Radio	 D.Menu / Top
	CH-	 CH- / Page-			
	REW	 << / Tune-			
	PLAY / PAUSE	 Play / Slow			
	PLAY / PAUSE	 Shift + Pause / Step /			
	STOP	 Stop / Hold			
	FWD	 >> / Tune+			
	REC	 Rec / Rec Mode			
	OPTION	 Setup / OPT /			
	MEDIA	 Display / Media			
	TIME SHIFT	 Eject / Surround			
	Pause	 Pause / Step / Freeze			
	PIP	 AV / Input / RDS			
	SWAP	 Shift + AV / Input / RDS			
	TIMER	 Sleep / Timer			
	Video FORMAT	 Picture / Format			

