






Original	Replacement
 Tv/Radio	 TV/Radio /
 Power	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Media	 Display / Media
 Lang.	 Audio / Lang I/II
 SUB	 Subtitle / EQ
 Guide	 Guide / EPG / -/--
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 FAV.	 Fav / Marker / PC
 Down	 Down
 X/Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 i	 Info / Angle
 P-	 CH- / Page-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow/Timer	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4





	Original	Replacement	Original	Replacement
	5 jkl	5	TAPE 5	5
	6 mno	6	TUNER 6	6
	7 pqrs	7	AUX - HDD 7	7
	8 tuv	8	USB 8	8
	9 wxyz	9	BLUETOOTH 9	9
	TTX	TTX	GOTO TEXT	Text / Goto
	0 .es	0	HDMI - SAT 0	0
	CH↻	CH Back	RETURN BACK	Back / Return

