








 



 
 



 







| Original | Replacement | Original | Replacement |
|--|---|---|--|
|  P100 |  Display / Media |  AV |  AV / Input / RDS |
|  Power |  Power |  0 |  0 |
|  REV |  << / Tune- |  -/-- |  Guide / EPG / -/-- |
|  Doub |  Audio / Lang I/II |  P+ |  CH+ / Page+ |
|  1 |  1 |  Up |  Up |
|  2 |  2 |  Mute |  Mute / Dimmer |
|  3 |  3 |  TV/TXT |  TV/Radio / |
|  Hold |  Stop / Hold |  Menu |  Menu / Home |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  Vol- |  Vol- |
|  6 |  6 |  OK |  OK |
|  Sub |  Subtitle / EQ |  Right |  Right |
|  Update |  D.Menu / Top |  Vol+ |  Vol+ |
|  7 |  7 |  Swap |  Back / Return |
|  8 |  8 |  P- |  CH- / Page- |
|  9 |  9 |  Down |  Down |
|  Mix |  Text / Goto |  16:9 |  Picture / Format |



