


 

 




 
 






 




 


 



 






 









 
 
 


 
 
 





 











Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	SUB		Subt
	TXT		Text
	EPG		Guide
	Language		Dual
	Go To		Smart
	Repeat		Shift + Text
	Page +		Shift + Ch +
	Page -		Shift + Ch -
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Down / CH -		Down
	Right / Vol +		Right
	Left / Vol -		Left
	OK		Ok
	FAV		Pre Ch
	TV / Radio		TV/R
	Up / CH +		Ch +
	Down / CH -		Ch -
	Right / Vol +		Vol +
	Left / Vol -		Vol -
	Recall		Back
	Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9










 



 




 


 


 
 
 



 




 
 






 





Original		Replacement		Original		Replacement	
	0		0				
	<<		<<				
	>>		>>				
	<<		<<				
	>>		>>				
	Play		Play				
	Pause / Time Shift		Pause				
	Stop		Stop				
	Rec		Rec				
	Red / PVR		Red				
	Green / V-Format		Green				
	Green / V-Format		Format				
	Yellow / Aspect		Yellow				
	Yellow / Aspect		Options				
	Blue / Timer		Blue				
	Blue / Timer		AV				





Original	Replacement	Original	Replacement
 Standby	 Power	 Right / Vol +	 Vol +
 Sub-T	 Subt	 Left / Vol -	 Left
 TTX	 Text	 Left / Vol -	 Vol -
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 FAV	 Shift + Pre Ch
 Audio	 Dual	 TV / Radio	 TV/R
 GOTO	 Shift + Guide	 Recall	 Pre Ch
 Repeat	 Shift + Text	 Info	 Info
 Page +	 Shift + Up	 1	 1
 Page -	 Shift + Down	 2	 2
 Menu	 Menu	 3	 3
 Exit	 Exit	 4	 4
 Up / CH +	 Up	 5	 5
 Up / CH +	 Ch +	 6	 6
 Down / CH -	 Down	 7	 7
 Down / CH -	 Ch -	 8	 8
 Right / Vol +	 Right	 9	 9





Original	Replacement	Original	Replacement
 0	 0		
 << Rev	 <<		
 >> Fwd	 >>		
 I<< Prev	 I<<		
 >>I Next	 >>I		
 Play	 PLAY MODE Play		
 Pause / Timeshift	 Pause		
 Stop	 Stop		
 Rec	 REC MODE Rec		
 Red / PVR	 A Red		
 Green / V-Format	 B Green		
 Green / V-Format	 PICTURE FORMAT Format		
 Yellow / Aspect	 C Yellow		
 Yellow / Aspect	 SHIFT +  PICTURE FORMAT Shift + Format		
 Blue / Timer	 D Blue		
 Blue / Timer	 TIMER AV AV		

