 



 





 



 









 















 



 



 



 













 





Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Eject	 Eject / Surround	 Setup	 Setup / OPT /
 Angle	 Info / Angle	 Up	 Up
 Repeat	 Shift + Green / APP / REPEAT	 CH+	 CH+ / Page+
 Q-Play	 D.Menu / Top	 Return	 Back / Return
 Search	 Shift + Red / Netflix / SEARCH	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 PgUp/Title	 Sound / Title
 List/PBC	 Smart / List	 CH-	 CH- / Page-
 4	 4	 Down	 Down
 5	 5	 PgDn/Menu	 Menu / Home
 6	 6	 EPG/P/N	 Guide / EPG / -/-
 Zoom	 Zoom / Size	 Exit/Slow	 Exit / Cancel / Clear
 7	 7	 Info/Display	 Display / Media
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-





	Original	Replacement
	Tv/Radio	TV/Radio /
	TTX	Text / Goto
	FAV/A-B	Fav / Marker / PC
	Audio	Audio / Lang I/II
	Subtitle	Subtitle / EQ
	Mute	Mute / Dimmer
	Play	Play / Slow
	Pause	Pause / Step / Freeze
	Stop	Stop / Hold
	Red	Red / Netflix / Search
	I<<	I<< / Preset-
	>>I	>>I / Preset+
	Green	Green / APP / Repeat
	Yellow	Yellow / YouTube / Repeat
	<<	<< / Tune-
	>>	>> / Tune+
	Blue	Blue / Prime Video / Random

	Original	Replacement
	Video	Shift + 4
	USB	Shift + 8
	DVD/DVB	Shift + 2
	Random	Shift + Blue / Prime

