 









 














 












Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide / EPG / -/-
 Recall	 Shift + Back / Return
 Picture	 Picture / Format
 Sound	 Sound / Title
 Source	 AV / Input / RDS

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 FAV	 Fav / Marker / PC
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Info	 Info / Angle
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 TV	 TV/Radio /





Original	Replacement	Original	Replacement
YouTube	SHIFT +  REPEAT A-B		Shift + Yellow / YouTube /
Netflix	SHIFT +  SEARCH		Shift + Red / Netflix /
Smart	LIST SMART		Smart / List
DVD MENU	REC MODE		Rec / Rec Mode
I<<	PRESET-		I<< / Preset-
>>I	PRESET+		>>I / Preset+
Stop	HOLD		Stop / Hold
DVD SETUP REC LIST	OPT-TOOLS SETUP		Setup / OPT /
<<	TUNE-		<< / Tune-
>>	TUNE+		>> / Tune+
Play	SLOW		Play / Slow
Pause	STEP-FREEZE		Pause / Step / Freeze
GOTO	NETFLIX SEARCH		Red / Netflix / Search
A-B	APP REPEAT		Green / APP / Repeat
ANGLE	YouTube REPEAT A-B		Yellow / YouTube / Repeat
REPEAT	Prime Video RANDOM		Blue / Prime Video / Random

Original	Replacement

