




Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up		Up
	CH+		CH+ / Page+
	Left		Left
	Vol-		Vol-
	OK		OK
	Right		Right
	Vol+		Vol+
	Down		Down
	CH-		CH- / Page-
	Red		Red / Netflix / Search
	EPG		Guide / EPG / -/-
	Green		Green / APP / Repeat
	Audio		Audio / Lang I/II
	Yellow		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Blue		Blue / Prime Video / Random
	TTX		Text / Goto
	i		Info / Angle
	FAV		Fav / Marker / PC
	Tv/Radio		TV/Radio /





Original		Replacement		Original	Replacement
	Roll		Smart / List		
	Prog		Shift + TV/Radio / Program		
	Digest		Display / Media		
	Device		Picture / Format		
	Rec		Rec / Rec Mode		
	Zoom		Zoom / Size		
	Stop		Stop / Hold		
	Prev		I<< / Preset-		
	Next		>>I / Preset+		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	<<		<< / Tune-		
	>>		>> / Tune+		

