



 



 



 


 
 



 

 

 

 

 







 

 

 






 
 


 
 


 
 
 


 


 








 






 

 







Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 Mute	 Mute	 Display	 Shift + Info
 1	 1	 Enter	 Ok
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Left	 Left
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol +
 7	 7	 Vol-	 Vol -
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 FAV/List	 Dual
 Recall	 Pre Ch	 Freeze	 Options
 Source	 AV	 Tv/Radio	 TV/R
 Menu	 Menu	 Rec	 Rec
 P.Mode	 Shift + Format	 Red	 Red
 S.Mode	 Shift + Dual	 Green	 Green

Original	Replacement	Original	Replacement
 Exit	 Exit	 Exit	 Exit
 Display	 Shift + Info	 Enter	 Ok
 Up	 Up	 Down	 Down
 Left	 Left	 Right	 Right
 Vol+	 Vol +	 Vol-	 Vol -
 CH+	 Ch +	 CH-	 Ch -
 FAV/List	 Dual	 Freeze	 Options
 Tv/Radio	 TV/R	 Rec	 Rec
 Red	 Red	 Green	 Green





Original	Replacement	Original	Replacement
Yellow	Yellow		
Cyan	Blue		
<</Guide	<<		
>>/Aspect	>>		
I<</Cancel	+  Shift + Subt		
>>I/Sub.Pg	Back		
Stop/Index	Stop		
Play/Pause/Time Shift	Play		
Subtitle	Subt		
Text	Text		
Reveal	+  Shift + Options		
Size	Format		
Hold	Eject		
DTV/ATV	Info		
Rec List	D. Menu		
Sleep	Sleep		
MTS	+  Shift + Sleep		

