










 




Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/-	 Shift + Guide / EPG / -/-
 Recall	 Back / Return
 Vol+	 Vol+
 I/II/Audio	 Audio / Lang I/II
 Auto	 Smart / List

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK/Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Play/Pause / Size	 Zoom / Size
 Play/Pause / Size	 Play / Slow





	Original	Replacement		Original	Replacement
	Play/Pause / Size	Pause / Step / Freeze			
	Stop/Hold	Stop / Hold			
	Text	Text / Goto			
	Subtitle	Subtitle / EQ			
	<</Index	<< / Tune-			
	>>/Reveal	>> / Tune+			
	<</Subpage	<< / Preset-			
	>> /FAV	>> / Preset+			
	>> /FAV	Fav / Marker / PC			
	Media	Shift + Display / Media			
	Rec	Rec / Rec Mode			
	EPG	Guide / EPG / -/--			
	Tv/Radio	TV/Radio /			
	Red	Red / Netflix / Search			
	Green	Green / APP / Repeat			
	Yellow	Yellow / YouTube / Repeat			
	Blue	Blue / Prime Video / Random			

	Original	Replacement

