






 






Original	Replacement
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide / EPG / -/--
 Recall	 Back / Return
 Vol+	 Vol+
 I/II/Audio	 Audio / Lang I/II
 Auto	 Smart / List

Original	Replacement
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
	
	
 OK/Enter	 OK
	
 Menu	 Menu / Home
	
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 Play/Pause / Size	 Zoom / Size
 Play/Pause / Size	 Play / Slow



