



 









 
 
 







 



 

 

 

















 





















Original	Replacement	Original	Replacement
	Power		Power
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Guide		Guide / EPG / -/-
	3D		Shift + 3
	Smart Tv		Smart / List
	Home		Menu / Home
	Ambilight		Display / Media
	[<>]		Picture / Format
	TV		TV/Radio /
	OK		OK
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	[i]/Info		Info / Angle
	Exit		Exit / Cancel / Clear
	Back		Back / Return
	List		Shift + Smart / List
	III/Options		Setup / OPT /
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1





Original		Replacement		Original		Replacement	
2 ABC	2	DVD 2	2				
DEF 3	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
MNO 6	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
WXYZ 9	9	BLUETOOTH 9	9				
0	0	HDMI - BAT 0	0				
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ				
TEXT	Text	GOTO TEXT	Text / Goto				
SOURCE	Source	RDS AV INPUT	AV / Input / RDS				

