

 
 


 





 




 
 
 



 







 



 

 
 


 
 


 



 
 
 

 








 
 








Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 EPG / Guide	 Guide
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Aspect	 Eject
 9	 9	 P.Mode	 Format
 0	 0	 S.Mode	 Shift + Dual
 FAV	 Pre Ch	 CH+	 Ch +
 Info	 Info	 CH-	 Ch -
 Text	 Text	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 Recall	 Back	 Subt	 Subt

Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 EPG / Guide	 Guide
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Aspect	 Eject
 9	 9	 P.Mode	 Format
 0	 0	 S.Mode	 Shift + Dual
 FAV	 Pre Ch	 CH+	 Ch +
 Info	 Info	 CH-	 Ch -
 Text	 Text	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 Recall	 Back	 Subt	 Subt





Original	Replacement
Lang	Dual
Rec List	Smart
USB / Media	Media
SOS / Help	TV/R
Select	D. Menu
Rec	Rec
Stop	Stop
Play / Pause	Play
Play / Pause	Pause
Goto	3D
I<<	I<<
>>I	>>I
<<	<<
>>	>>
Red / Timer	Red
Red / Timer	+ Shift + AV
Green	Green

Original	Replacement
Yellow	Yellow
Blue	Blue

