


 









 
 



 


Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	TV / AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	SAT		Smart
	Menu		Menu
	EPG		Guide

Original	Replacement	Original	Replacement
	Info		Info
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Page+		Ch +
	Page-		Ch -
	Red / Audio		Red
	Red / Audio		Dual
	Green / Text		Green
	Yellow / Text		Yellow
	Yellow / Text		Text
	Blue / Find		Blue





Original	Replacement	Original	Replacement
Power		Power	
Mute		Mute	
Recall		Back	
EPG		Guide	
Info		Info	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Menu		Menu	
Exit		Exit	

Original	Replacement	Original	Replacement
Up		Up	
Left		Left	
OK		Ok	
Right		Right	
Down		Down	
PAL / NTSC		Format	
FAV		Pre Ch	
TV / Radio		TV/R	
SAT		Smart	
TV / AV		AV	
Play / Pause		Play	
Play / Pause		Pause	
Zoom		Eject	
Red / Audio		Red	
Red / Audio		Dual	
Green / Position		Green	
Yellow / Text		Yellow	



