 





 

 

 





















Original	Replacement	Original	Replacement
 POWER	 Power	 Recall	 Back / Return
 MUTE	 Mute / Dimmer	 VOL+	 Vol+
 V. FORMAT	 Picture / Format	 MENU	 Menu / Home
 SLEEP	 Sleep / Timer	 EXIT	 Exit / Cancel / Clear
 TEXT	 Text / Goto	 CH+	 CH+ / Page+
 TV / Radio	 TV/Radio /	 VOL-	 Vol-
 1	 1	 UP	 Up
 2	 2	 CH-	 CH- / Page-
 3	 3	 LEFT	 Left
 4	 4	 OK	 OK
 5	 5	 RIGHT	 Right
 6	 6	 PAGE DOWN	 Shift + CH- /
 7	 7	 DOWN	 Down
 8	 8	 PAGE UP	 Shift + CH+ /
 9	 9	 FAV	 Fav / Marker / PC
 Docs	 Shift + Red / Netflix /	 GUIDE	 Guide / EPG / -/-
 0	 0	 INFO	 Info / Angle





Original	Replacement
 SELECT	 Smart / List
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW /	 Yellow / YouTube / Repeat
 YELLOW /	 Audio / Lang I/II
 BLUE /	 Blue / Prime Video / Random
 BLUE /	 Subtitle / EQ
 PLAY	 Play / Slow
 STOP	 Stop / Hold
 PAUSE	 Pause / Step / Freeze
 REC	 Rec / Rec Mode
 Doc	 Shift + Green / APP /
 STEP	 Shift + Pause / Step /
 REW	 << / Tune-
 FWD	 >> / Tune+
 ZOOM	 Zoom / Size
 > <	 Shift + Stop /

Hold

Original	Replacement
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 SAT	 Shift + 0
 PHOTO	 Display / Media
 BOOK	 Shift + Blue / Prime
 OPEN BOOK	 Shift + Yellow / YouTube /

