









 



 



 











 



 











Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 I/II	 Audio / Lang I/II
 PR+	 CH+ / Page+

Original	Replacement
 Vol-	 Vol-
 Input	 AV / Input / RDS
 PR-	 CH- / Page-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Favourite	 Fav / Marker / PC
 FAV-	 Shift + CH- /
 FAV+	 Shift + CH+ /
 Info	 Info / Angle
 P-Mode	 Picture / Format
 S-Mode	 Sound / Title
 ARC	 Display / Media































 










	Original	Replacement	
	EPG	 Guide / EPG / -/--	
	Text	 Text / Goto	
	Mix	 +  Shift + Text /	
	Size	 Zoom / Size	
	Reveal	 D.Menu / Top	
	Hold	 Stop / Hold	
	Index	 Smart / List	
	S.Page	 Eject / Surround	
	S.TITL	 Subtitle / EQ	
	Red	 Red / Netflix / Search	
	Green	 Green / APP / Repeat	
	Yellow	 Yellow / YouTube / Repeat	
	Blue	 Blue / Prime Video / Random	

Original	Replacement








 













Original	Replacement	
Update	 + 	Shift + D.Menu / Top Menu
Aft/Caf	 + 	Shift + AV / Input / RDS
Reveal		Setup / OPT /
Off/Tim		Eject / Surround
Game Coo		Smart / List
2.Fav P/C 2.		Fav / Marker / PC
Chan.Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
Guide -/-- 1.		Guide / EPG / -/--

Original	Replacement	
0/10		0
Menu audio		Audio / Lang I/II
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Color+ P.Std		Picture / Format
Color- S.Std		Sound / Title
Audio+	 + 	Shift + Vol+
Tune-		<< / Tune-
Tune+		>> / Tune+
Menu		Menu / Home
Mute		Mute / Dimmer
Info		Info / Angle
Subt.List		Subtitle / EQ
Txt Stop		Stop / Hold
Sleep Timer		Sleep / Timer





Original	Replacement	Original	Replacement
Return TV	 TV/Radio /		
Menu video	 D.Menu / Top		
Text	 Text / Goto		
Txt Expand	 Zoom / Size		
TV/AV	 AV / Input / RDS		
On/Off	 Power		
Menu Up	 Up		
Display	 Display / Media		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		

