













 




Original	Replacement
	Power
	TV
	Up
	Left
	OK
	Right
	Down
	Retoru
	Sortie
	Menu
	V+
	V-
	Zoom
	Mute
	P+
	P-
	0

Original	Replacement
	1
	2
	3
	4
	5
	6
	7
	8
	9
	<<
	>
	>>
	Stop
	Rec

