



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / Sleep	 0
 0 / Sleep	 Sleep / Timer
 TV/Rad	 TV/Radio /
 TV / SAT	 AV / Input / RDS
 CH+	 CH+ / Page+
 CH-	 CH- / Page-

Original	Replacement
 Vol+	 Vol+
 Vol-	 Vol-
 Menu	 Menu / Home
 Recall	 Back / Return
 P+	 Shift + CH+ /
 P-	 Shift + CH- /
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Fav	 Fav / Marker / PC
 EPG	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Red / V-FMT	 Red / Netflix / Search
 Red / V-FMT	 Picture / Format





Original	Replacement
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Blue / Timer / Shift + Sleep / Timer
	Info / Angle
	Subt / Subtitle / EQ
	Audio / Lang I/II
	Find / Shift + Red / Netflix /
	Rec / Rec Mode
	Stop / Hold
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	Shift + Left

Original	Replacement
	Shift + Right
	Smart / List
	Shift + 8
	Display / Media

