







 

 
 
 
 

 
 
 

 



 




 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Return / Text	 Shift + Back
 Mute	 Mute	 Subtitle	 Subt
 Red / Eject	 Red	 Display	 Shift + Info
 Red / Eject	 Eject	 Menu / Info	 Info
 Green / Title	 Green	 Menu / Info	 D. Menu
 Yellow / DVD	 Yellow	 Menu	 Menu
 Yellow / DVD	 Options	 Up	 Up
 Blue / A-B	 Blue	 Source	 AV
 <</[≡o]	 <<	 Left	 Left
 >>/[≡?]	 >>	 OK	 Ok
 I<</[≡+]	 I<<	 Right	 Right
 >>I/[≡..]	 >>I	 EPG	 Guide
 Play	 Play	 Down	 Down
 Pause	 Pause	 Exit	 Exit
 Stop	 Stop	 Vol+	 Vol +
 Angle / [≡i]	 Smart	 FAV	 Pre Ch
 Return / Text	 Text	 CH+	 Ch +





Original		Replacement		Original		Replacement	
	Vol-		Vol -				
	REP		Rec				
	CH-		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Audio		Dual				
	0		0				
	Recall / Goto		Back				

