


 

 
 
 

 

 



 

 



 




 

 
 

 





Original	Replacement	Original	Replacement
 Power	 Power	 16:9	16:9
 Sleep	 Sleep	 Lang	Lang
 Mute	 Mute	 RCL	RCL
 Timer	 AV	 FAV	FAV
 EPI	 Guide	 Page+ / Timeshift	Shift + Ch +
 SUBTL	 Subt	 Page- / V-Format	Shift + Ch -
 Audio	 Shift + Dual	 Page- / V-Format	Shift + Format
 1	 1	 Up / CH+	Up
 2	 2	 Up / CH+	Ch +
 3	 3	 Down / CH-	Down
 4	 4	 Down / CH-	Ch -
 5	 5	 Right / Vol+	Right
 6	 6	 Right / Vol+	Vol +
 7	 7	 Left / Vol-	Left
 8	 8	 Left / Vol-	Vol -
 9	 9	 OK	Ok
 0	 0	 Menu	Menu

Original	Replacement	Original	Replacement
 Format	Format	 TV	DVD SAT AUX
 Dual	Dual		REC MODE
 Back	Back		SETTINGS
 Pre Ch	Pre Ch		ECO
 Shift + Ch +	Shift + Ch +		TIMER
 Shift + Ch -	Shift + Ch -		
 Shift + Format	Shift + Format		DISPLAY
 Up	Up		INFO
 Ch +	Ch +		RETURN
 Down	Down		BACK
 Ch -	Ch -		CH +
 Right	Right		CH -
 Vol +	Vol +		FAV
 Left	Left		
 Vol -	Vol -		
 Ok	Ok		
 Menu	Menu	