 
 














Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 Input	 AV	 Vol -	 Vol -
 TV / TXT	 Text	 Menu	 Menu
 Cancel	 Shift + Exit	 Mute	 Mute
 Reveal	 Smart	 Up	 Up
 Nicam / A2	 Options	 Left	 Left
 Hold	 Stop	 OK	 Ok
 Size	 Format	 Right	 Right
 Subpage	 Shift + Subt	 Down	 Down
 Index	 Shift + Info	 DVB	 Media
 Red / TV/Radio	 Red	 Exit	 Exit
 Red / TV/Radio	 TV/R	 1	 1
 Green	 Green	 2	 2
 Yellow	 Yellow	 3	 3
 Blue	 Blue	 4	 4
 CH +	 Ch +	 5	 5
 CH -	 Ch -	 6	 6





Original		Replacement		Original		Replacement	
	7		7		FAV +		>>
	8		8				
	9		9				
	0		0				
	Recall		Shift + Guide				
	Picture		Back				
	Sound		Shift + Format				
	Sleep		Shift + Dual				
	Subtitle		Sleep				
	Language		Subt				
	Display / Info		Dual				
	Zoom		Info				
	Text		Eject				
	FAV		Shift + Text				
	EPG		Pre Ch				
	FAV -		Guide				
			I<<				

