



Original	Replacement	Original	Replacement
 Power	 Power	 Blue / Subtitle	 Blue
 DVB	 Media	 Blue / Subtitle	 Subt
 Prog+	 Shift + Ch +	 CH+	 Ch +
 Prog-	 Shift + Ch -	 CH-	 Ch -
 System	 Smart	 Vol+	 Vol +
 Nicam/A2	 List	 Vol-	 Vol -
 DVB Menu	 D. Menu	 TV-Menu	 Menu
 TV Format	 Format	 TV-Exit	 Exit
 Exit	 Shift + Exit	 Up	 Up
 Info	 Info	 Left	 Left
 Language	 Dual	 OK	 Ok
 Text	 Shift + Text	 Right	 Right
 FAV	 Pre Ch	 Down	 Down
 EPG	 Guide	 TV/AV	 AV
 Red / TV/Radio	 Red	 Display	 Shift + Info
 Green / Audio	 Green	 1	 1
 Yellow / Freeze	 Yellow	 2	 2





Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
/- /-	SHIFT + GUIDE Shift + Guide
Recall	RETURN BACK Back
PICTURE	SHIFT + PICTURE FORMAT Shift + Format
SOUND	SHIFT + SOUND DUAL Shift + Dual
MUTE	MUTE Mute
FREEZE	 Pause
SLEEP	PROG SLEEP Sleep
TV/TXT	REPEAT TEXT Text
HOLD	■ Stop

Original	Replacement
REVEAL	SETTINGS OPT Options
CANCEL	SHIFT + RETURN BACK Shift + Back
SIZE	ZOOM ▲ Eject
SUBPAGE	SHIFT + AD SUBT Shift + Subt
INDEX	SHIFT + HOME SMART Shift + Smart

